



Ref. No.	Part No.	Description
1	5-1209	Body Assembly — Fuel Pump
2	5-1210	Body Assembly — Carburetor
3	*16-33	Ring — Retaining
4	20-530	Bowl Assembly — Fuel
5	21-614	Cover Assembly — Fuel Pump
6	30-714	Shaft & Lever Assembly — Throttle
7	34-73	Valve — Throttle
8	*52-505	Swivel Assembly
9	75-536	Float Assembly
10	78-37	Pin — Float Valve Lever
11	78-40	Pin — Float Assembly
12	82-34	Valve — Check
13	82-509	Valve Assembly — Enrichment
14	88-14	Plug — Limiting Jet
15	*99-13	Ball — Enrichment Friction
16	**92-11	Gasket — Jet Plug
17	**92-141	Gasket — Flange
18	**92-162	Gasket — Pump
19	**92-163	Gasket — Surge Chamber
20	**92-164	Gasket — Fuel Pump Assembly — Carburetor Body
21	*92-165	Gasket — Fuel Bowl
22	*92-548	Gasket/Diaphragm Kit
23	*95-67	Diaphragm — Surge Chamber
24	*95-68	Diaphragm — Pump
25	*96-517	Screw — Throttle Valve
26	*96-554	Screw — Fuel Bowl Assembly
27	*96-555	Screw — Fuel Pump Assembly
28	98-14	Spring — Idle Needle
29	98-84	Spring — Idle Air Bleed Needle
30	*98-162	Spring — Enrichment Friction
31	*98-188	Spring — Idle Feed Tube Pressure
32	98-262	Spring — Fuel Pump Leaf
33	98-263	Spring — Throttle Return
34	98-265	Spring — Float Support
35	100-541	Needle — Power Adjustment (Opt.)
36	*102-132	Needle — Idle
37	102-133	Needle — Idle Air Bleed
38	112-109	Jet — Limiting High Speed (.076)
38	112-107	Jet — Limiting High Speed (.070)
38	112-106	Jet — Limiting High Speed (.068)
38	112-113	Jet — Limiting High Speed (.072)
39	112-501	Jet Assembly (.076)
40	122-68	Tube — Idle Fuel Feed
41	136-113	Washer — Swivel
42	140-48	Screen — Fuel Inlet
43	148-54	Bushing — Throttle Spring
44	157-139	Plate — Throttle Bracket
45	166-50	Lever — Float Valve
46	*200-534	Float Valve, Seat & Gasket Assy.
47	300-794	Repair Kit

\*\* Parts in Gasket/Diaphragm Kit      \* Parts in Repair Kit  
 NOTE: Part numbers circled are eliminated when Pump System is removed.

WALBRO CORPORATION, Cass City, Michigan 48726

Form W-420 Printed in U.S.A.