



YAMAHA ENGINE

802 - (350cc)

806 - (338cc)

807 - (396cc)



YAMAHA ENGINE



802^o - (350cc)

806 - (338cc)

807 - (396cc)

CRANK & PISTON

806
807

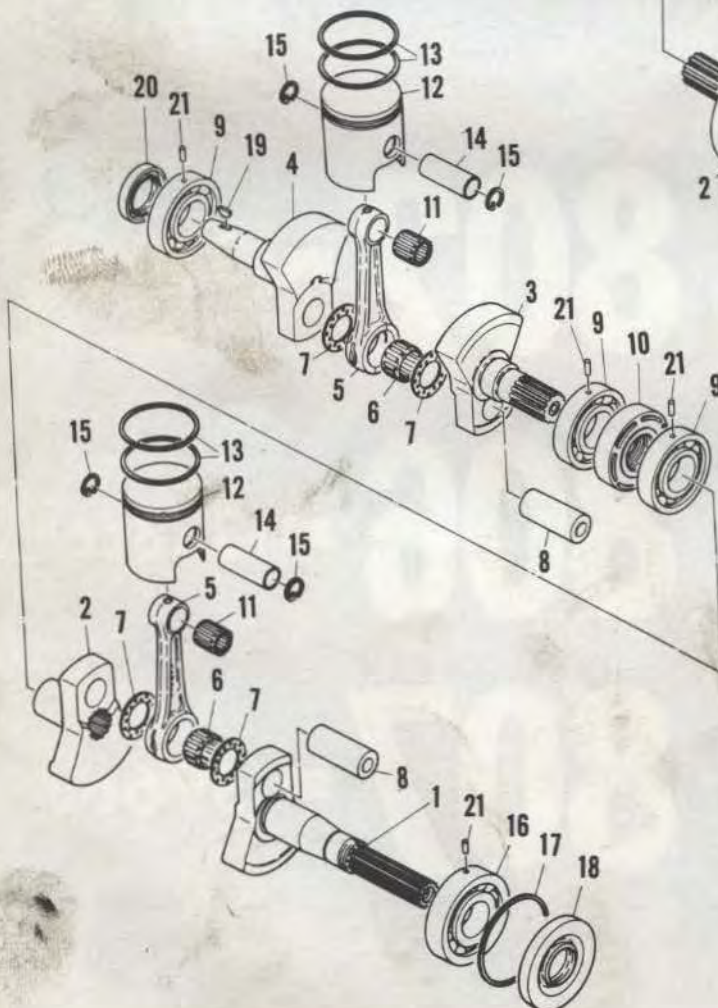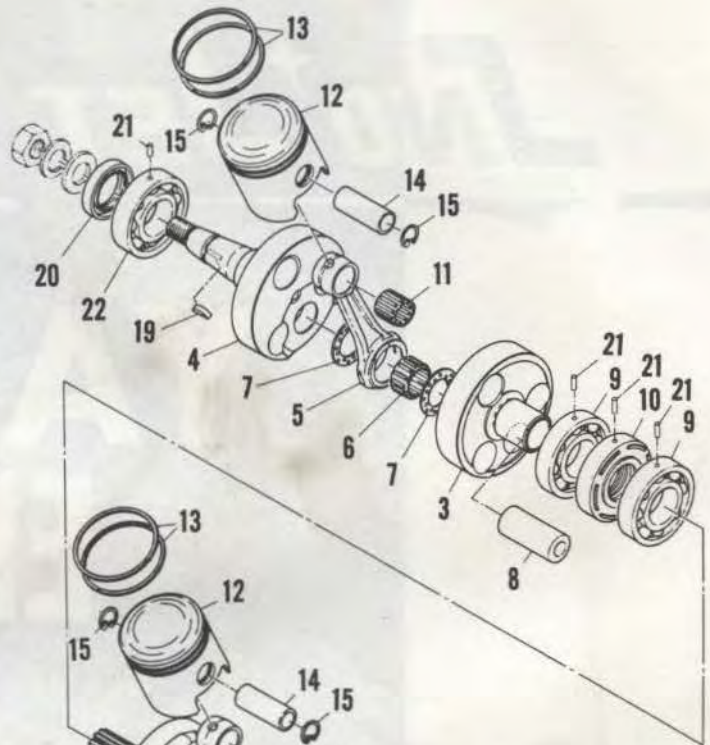

802

CRANK & PISTON (MODEL 802)

ITEM	SNO JET DIVISION GLASTON BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
0	810270	802-11400-00	Crank Ass'y	1
1	810271	802-11412-00	.Crank (1) (L.H.)	1
2	810272	802-11422-00	.Crank (1) (R.H.)	1
3	810273	802-11432-00	.Crank (2) (L.H.)	1
4	810274	802-11442-00	.Crank (2) (R.H.)	1
5	810234	168-11651-00	.Rod, connecting	2
6	810482	93310-52430	.Bearing	2
7	810218	152-11685-00	.Washer, crank pin	4
8	810235	168-11681-00	.Pin, crank	2
9	810478	93306-20602	.Bearing	3
10	810228	168-11515-00	.Seal, labyrinth	1
11	810480	93310-21824	Bearing	2
12	810238	211-11631-01	Piston	2
	810239	211-11631-11	Piston(1st o.s.) 0.25mm	2
	810240	211-11631-21	Piston (2nd o.s.) 0.5 mm	2
13	810230	168-11601-00	Piston ring set	2
	810231	168-11601-10	Piston ring set (1st o.s.) 0.25 mm	2
	810232	168-11601-20	Piston ring set (2nd o.s.) 0.5 mm	2
14	810233	168-11633-00	Pin, piston	2
15	810245	604-11634-00	Clip, piston pin	4
16	810479	93306-306301	Bearing	1
17	810484	93440-78011	Circlip	1
18	810472	93103-30042	Oil Seal	1
19	810244	604-11545-00	Key, woodruff	1
20	810473	93103-32043	Oil Seal	1
21	810485	93604-12037	Pin, dowel	4

CRANK & PISTON (MODEL 806)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810331	806-11400-00	Crank Ass'y	1
1	810377	807-11412-00	.Crank (1) (L.H.)	1
2	810378	807-11422-00	.Crank (1) (R.H.)	1
3	810379	807-11432-00	.Crank (2) (L.H.)	1
4	810380	807-11442-00	.Crank (2) (R.H.)	1
5	810242	235-11651-00	.Rod, connecting	2
6	810481	93310-42434	.Bearing	2
7	810218	152-11685-00	.Washer, crank pin	4
8	810235	168-11681-00	.Pin, crank	2
9	810478	93306-20602	.Bearing	2
10	810228	168-11515-00	.Seal, labyrinth	1
11	810480	93310-21824	Bearing	2
12	810337	806-11631-00-96	Piston (0.96)	2
	810335	806-11611-00-97	Piston (0.97)	2
	810338	806-11631-00-98	Piston (0.98)	2
13	810332	806-11601-00	Ring, piston	2
14	810233	168-11633-00	Pin, piston	2
15	810245	604-11634-00	Clip, piston pin	4
16	810520	93306-30603	Bearing	1
17	810484	93440-78011	Circlip	1
18	810474	93103-32054	Oil Seal	1
19	810241	214-11545-00	Key, woodruff	1
20	810475	93103-32055	Oil Seal	1
21	810485	93604-12037	Pin, dowel	5
22	810478	93306-20602	Bearing	1

CRANK & PISTON (MODEL 807)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810519	807-11400-00	Crank Ass'y	1
1	810377	807-11412-00	.Crank (1) (L.H.)	1
2	810378	807-11422-00	.Crank (1) (R.H.)	1
3	810379	807-11432-00	.Crank (2) (L.H.)	1
4	810380	807-11442-00	.Crank (2) (R.H.)	1
5	810242	235-11651-00	.Rod, connecting	2
6	810481	93310-42434	.Bearing	2
7	810218	152-11685-00	.Washer, crank pin	4
8	810235	168-11681-00	.Pin, crank	2
9	810478	93306-20602	.Bearing	2
10	810228	168-11515-00	.Seal, labyrinth	1
11	810480	93310-21824	Bearing	2
12	810387	807-11631-00-96	Piston (0.96)	2
	810388	807-11631-00-97	Piston (0.97)	2
	810389	807-11631-00-98	Piston (0.98)	2
13	810382	807-11601-00	Ring, piston	2
14	810233	168-11633-00	Pin, piston	2
15	810245	604-11634-00	Clip, piston pin	4
16	810520	93306-30603	Bearing	1
17	810484	93440-78011	Circlip	1
18	810474	93103-32054	Oil Seal	1
19	810241	214-11545-00	Key, woodruff	1
20	810475	93103-32055	Oil Seal	1
21	810485	93604-12037	Pin, dowel	5
22	810478	93306-20602	Bearing	1

CRANKCASE



CRANKCASE
(MODEL 802)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810283	802-15100-00	Crank Case Ass'y	1
1	810284	802-15111-00	.Case, crank (1)	1
2	810285	802-15121-00	.Case, crank (2)	1
3	810437	91810-08016	Pin, dowel (A)	2
4	810490	97101-08060	Bolt	8
5	810491	97101-08070	Bolt	2
6	810492	97101-08085	Bolt	2
7	810457	92901-08200	Washer, plain	12
8	810227	168-11361-00	Bolt, cylinder holding	8
9	810226	168-11351-00	Gasket, cylinder	2
10	810267	802-11311-00	Cylinder (L.H.)	1
11	810268	802-11321-00	Cylinder (R.H.)	1
12	810225	168-11181-01	Gasket, cylinder head	2
13	810265	802-11111-00	Head, cylinder (L.H.)	1
14	810266	802-11121-00	Head, cylinder (R.H.)	1
15	810507	98801-08200	Nut, cylinder holding	8
16	810457	92901-08200	Washer, plain	8
20	810488	94700-00004	Plug, spark	2


CRANK CASE
(MODEL 806)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810405	807-15100-00	Crank Case Ass'y	1
1	810406	807-15111-00	.Case, crank (1)	1
2	810407	807-15121-00	.Case, crank (2)	1
3	810437	91810-080-16	Pin, dowel (A)	2
4	810490	97101-080-60	Bolt	8
5	810491	97101-080-70	Bolt	2
6	810492	97101-080-85	Bolt	2
7	810457	92901-082-00	Washer, plain	12
8	810243	248-11361-00	Bolt, cylinder holding	8
9	810376	807-11351-00	Gasket, cylinder	2
10	810329	806-11311-00	Cylinder (L.H.)	1
11	810330	806-11321-00	Cylinder (R.H.)	1
12	810328	806-11181-00	Gasket, cylinder head	2
13	810326	806-11111-00	Head, cylinder (L.H.)	1
14	810327	806-11121-00	Head, cylinder (R.H.)	1
15	810374	807-11171-00	Nut, cylinder holding	8
16	810460	92901-12200	Washer, plain	8
17	810439	92501-06010	Screw, pan head	2
18	810518	137-15384-00	Gasket, screw	2
19	810424	807-24461-00	Pipe, joint	1
20	810488	94700-00004	Plug, spark	2

CRANKCASE (MODEL 807)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810405	807-15100-00	Crank Case Ass'y	1
1	810406	807-15111-00	.Case, crank (1)	1
2	810407	807-15121-00	.Case, crank (2)	1
3	810437	91810-08016	Pin, dowel (A)	2
4	810490	97101-08060	Bolt	8
5	810491	97101-08070	Bolt	2
6	810492	97101-08085	Bolt	2
7	810457	92901-08200	Washer, plain	12
8	810243	248-11361-00	Bolt, cylinder holding	8
9	810376	807-11351-00	Gasket, cylinder	2
10	810513	807-11311-00	Cylinder (L.H.)	1
11	810514	807-11321-00	Cylinder (R.H.)	1
12	810515	807-11381-00	Gasket, cylinder head	2
13	810516	807-11111-00	Head, cylinder (L.H.)	1
14	810517	807-11121-00	Head, cylinder (R.H.)	1
15	810374	807-11171-00	Nut, cylinder holding	8
16	810460	92901-12200	Washer, plain	8
17	810439	92501-06010	Screw, pan head	2
18	810518	137-15384-00	Gasket, screw	2
19	810424	807-24461-00	Pipe, joint	1
20	810488	94700-00004	Plug, spark	2

FLYWHEEL MAGNETO

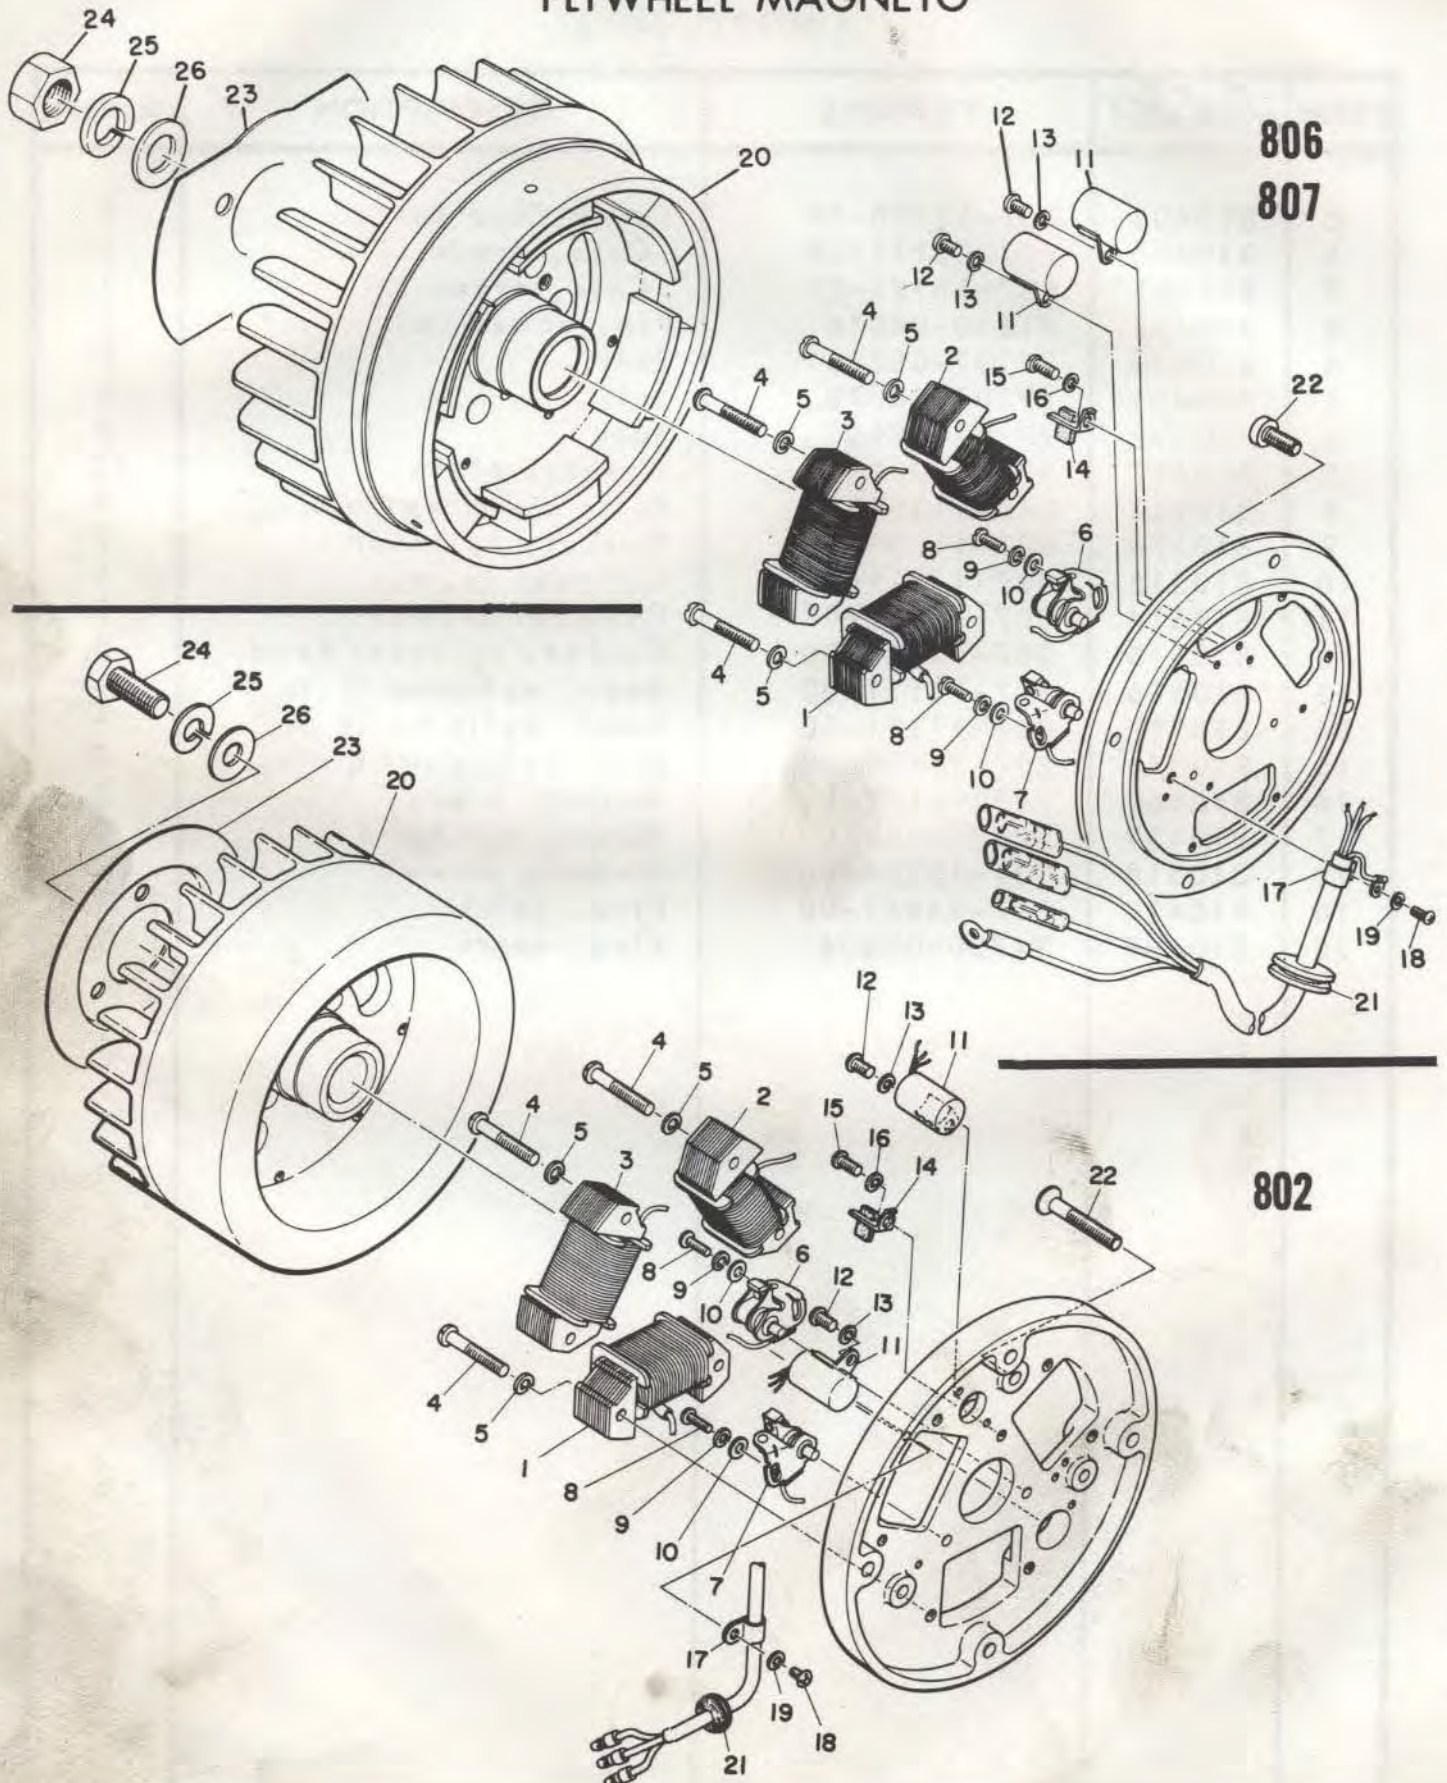

806
807

802

FLYWHEEL MAGNETO
(MODEL 802)

ITEM	SNO JET	YAMAHA	DESCRIPTION	QUANT.
0	810312	802-81300-20	Flywheel Magneto Ass'y	1
1	810313	802-81312-20	.Coil, source (L.H.)	1
2	810318	802-81342-20	.Coil, source (R.H.)	1
3	810314	802-81313-20	.Coil, lighting	1
4	810504	98502-05025	.Screw, pan head	6
5	810453	92901-05100	.Washer, spring	6
6	810262	801-81321-20	.Contact Breaker Ass'y (L.H.)	1
7	810264	801-85322-20	.Contact Breaker Ass'y (R.H.)	1
8	810502	98502-04012	.Screw, pan head	2
9	810451	92901-04100	.Washer, spring	2
10	810452	92901-04200	.Washer, plain	2
11	810316	802-81326-20	.Condenser	2
12	810501	98502-04010	.Screw, pan head	2
13	810451	92901-04100	.Washer, spring	2
14	810213	120-81331-20	.Lubricator	2
15	810501	98502-04010	.Screw, pan head	2
16	810451	92901-04100	.Washer, spring	2
17	810209	104-81328-20	.Clamp, lead	1
18	810500	98502-04008	.Screw, pan head	1
19	810451	92901-04100	.Washer, spring	1
20	810320	802-81350-20	.Rotor Ass'y	1
21	810317	802-81329-00	.Grommet, low tension cord	1
22	810495	98202-06035	Screw, flat head	2
23	810321	802-81362-00	Cover, hole	1
24	810429	91101-10025	Bolt	1
25	810458	92901-10100	Washer, spring	1
26	810249	801-11557-00	Washer	1

FLYWHEEL MAGNETO (MODEL 806)


ITEM	SNO*JET	YAMAHA	DESCRIPTION	QUANT.
0	810361	806-81300-20	Flywheel Magneto Ass'y	1
1	810362	806-81311-20	.Coil, source (L.H.)	1
2	810363	806-81312-20	.Coil, source (R.H.)	1
3	810364	806-81313-20	.Coil, lighting	1
4	810367	802-81345-20	.Screw, pan head	6
5	810453	92901-05100	.Washer, spring	6
6	810365	806-81321-20	.Contact Breaker Ass'y (L.H.)	1
7	810366	806-81322-20	.Contact Breaker Ass'y (R.H.)	1
8	810211	110-81347-20	.Screw, pan head	2
9	810451	92901-04100	.Washer, spring	2
10	810452	92901-04200	.Washer, plain	2
11	810315	802-81325-20	.Condenser	2
12	810210	110-81346-20	.Screw, pan head	2
13	810451	92901-04100	.Washer, spring	2
14	810213	120-81331-20	.Lubricator	2
15	810210	110-81346-20	.Screw, pan head	2
16	810451	92901-04100	.Washer, spring	2
17	810208	104-51328-20	.Clamp, lead	1
18	810223	165-81145-21	.Screw, pan head	1
19	810451	92901-04100	.Washer, spring	1
20	810368	806-81350-20	.Rotor Ass'y	1
21	810317	802-81329-00	.Grommet, low tension cord	1
22	810446	92502-06015	Screw, flat head	4
23	810425	807-81362-00	Cover, hole	1
24	810229	168-11555-00	Nut, crankshaft	1
25	810461	92901-16100	Washer, spring	1
26	810381	807-11557-00	Washer	1

FLYWHEEL MAGNETO (MODEL 807)


ITEM	SNO ⁺ JET DIVISION GLASTON BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
0	810361	806-81300-20	Flywheel Magneto Ass'y	1
1	810362	806-81311-20	.Coil, source (L.H.)	1
2	810363	806-81312-20	.Coil, source (R.H.)	1
3	810364	806-81313-20	.Coil, lighting	1
4	810367	802-81345-20	.Screw, pan head	6
5	810453	92901-05100	.Washer, spring	6
6	810365	806-81321-20	.Contact Breaker Ass'y (L.H.)	1
7	810366	806-81322-20	.Contact Breaker Ass'y (R.H.)	1
8	810211	110-81347-20	.Screw, pan head	2
9	810451	92901-04100	.Washer, spring	2
10	810452	92901-04200	.Washer, plain	2
11	810315	802-81325-20	.Condenser	2
12	810210	110-81346-20	.Screw, pan head	2
13	810451	92901-04100	.Washer, spring	2
14	810213	120-81331-20	.Lubricator	2
15	810210	110-81346-20	.Screw, pan head	2
16	810451	92901-04100	.Washer, spring	2
17	810208	104-51328-20	.Clamp, lead	1
18	810223	165-81145-21	.Screw, pan head	1
19	810451	92901-04100	.Washer, spring	1
20	810368	806-81350-20	.Rotor Ass'y	1
21	810317	802-81329-00	.Grommet, low tension cord	1
22	810446	92502-06015	Screw, flat head	4
23	810425	807-81362-00	Cover, hole	1
24	810229	168-11555-00	Nut, crankshaft	1
25	810461	92901-16100	Washer, spring	1
26	810381	807-11557-00	Washer	1

FAN CASE & AIR SHROUD

802

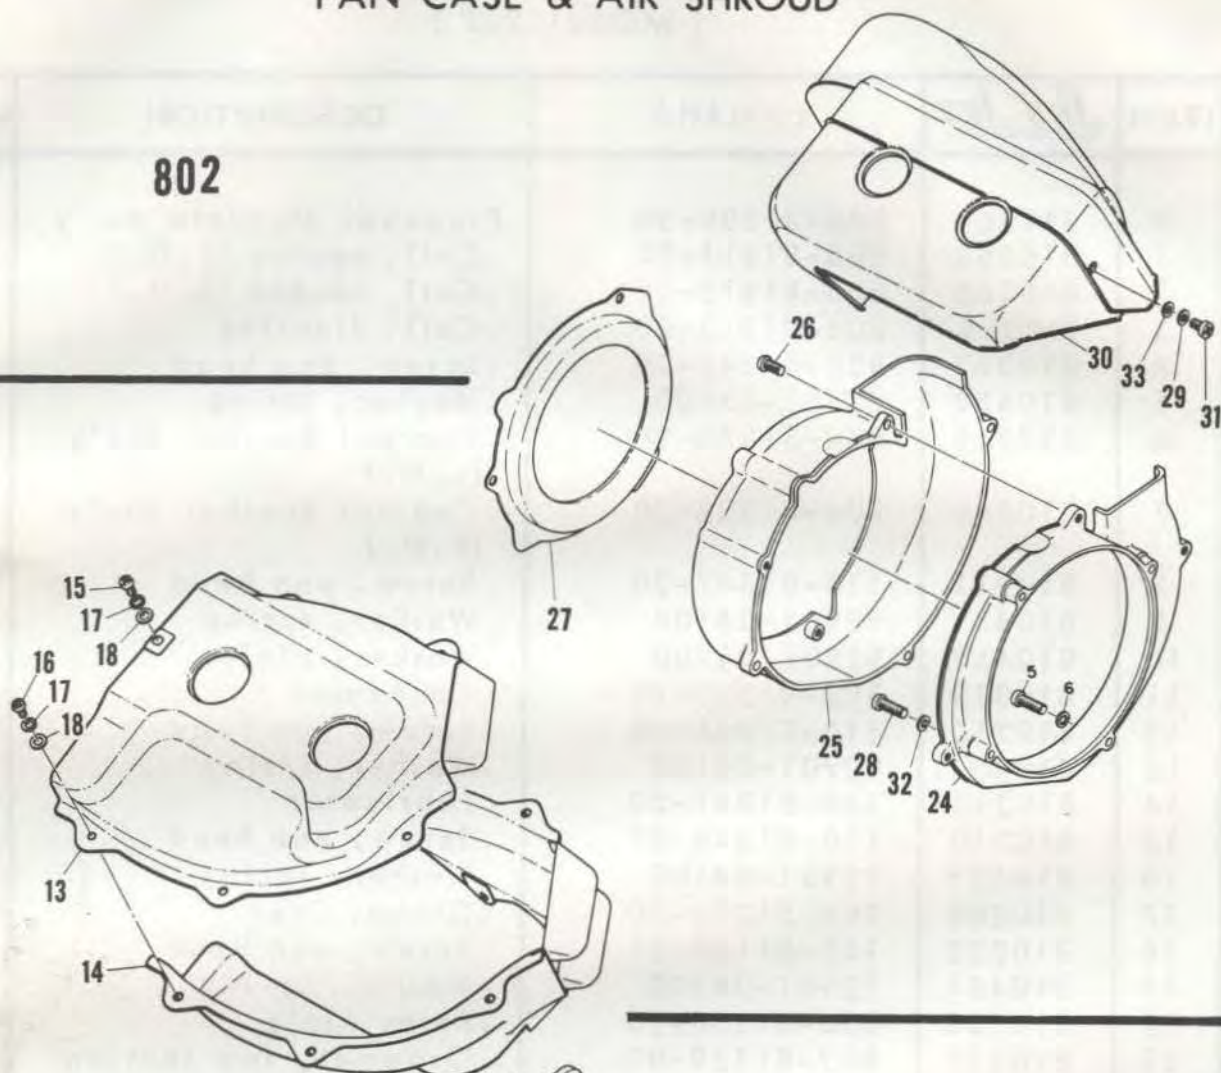

806
807

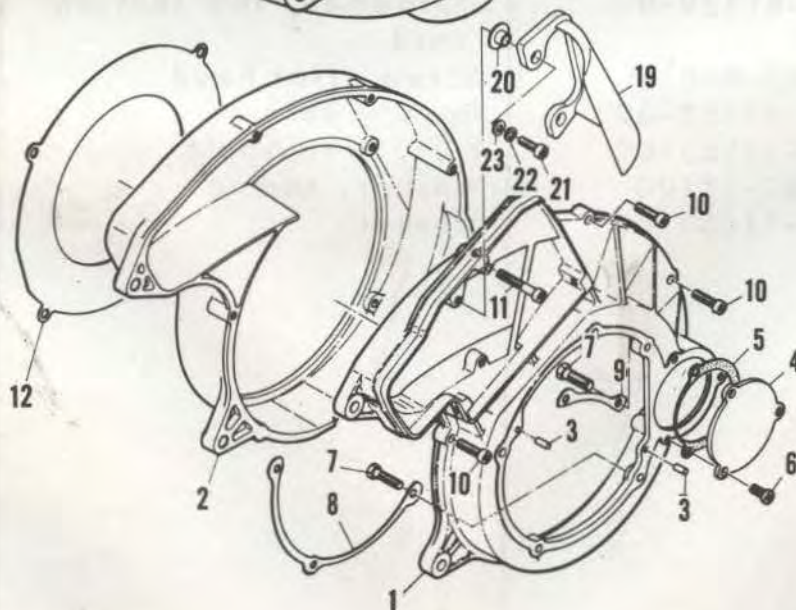

FAN CASE & AIR SHROUD
(MODEL 802)

ITEM	SNO⁺JET DIVISION GLASTON BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
24	810275	802-12621-00	Case, fan (1)	1
25	810276	802-12622-00	Case, fan (2)	1
26	810443	92501-06025	Screw, pan head	4
27	810277	802-12631-00	Deflector	1
28	810443	802-06025-00	Screw, pan head	4
29	810463	92902-06100	Washer, spring	4
30	810278	802-12651-00	Air Shroud	1
31	810440	92501-06012	Screw, pan head	4
32	810454	92901-06100	Washer, spring	4
33	810455	92901-06200	Washer, plain	4

FAN CASE & AIR SHROUD (MODEL 806)


ITEM	SNO*JET	YAMAHA	DESCRIPTION	QUANT.
1	810393	807-12621-00	Case, fan (1)	1
2	810394	807-12622-00	Case, fan (2)	1
3	810486	93604-14012	Pin, dowel (B)	2
4	810398	807-12633-00	Plate	1
5	810399	807-12663-00	Gasket	1
6	810511	98901-05015	Screw, bind	3
7	810395	807-12623-00	Bolt	5
8	810396	807-12624-00	Washer, lock (1)	1
9	810512	807-12625-00	Washer, lock (2)	1
10	810443	92501-06025	Screw, pan head	4
11	810444	92501-06040	Screw, pan head	1
12	810342	806-12631-00	Deflector	1
13	810343	806-12651-00	Air Shroud, cylinder (1)	1
14	810344	806-12652-00	Air Shroud, cylinder (2)	1
15	810440	92501-06012	Screw, pan head	5
16	810439	92501-06010	Screw, pan head	7
17	810454	92901-06100	Washer, spring	12
18	810455	92901-06200	Washer, plain	12
19	810397	807-12632-00	Deflector (2)	1
20	810401	807-12665-00	Collar (2)	2
21	810442	92501-06020	Screw, pan head	2
22	810454	92901-06100	Washer, spring	2
23	810400	807-12664-00	Washer	2

FAN CASE & AIR SHROUD (MODEL 807)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
1	810393	807-12621-00	Case, fan (1)	1
2	810394	807-12622-00	Case, fan (2)	1
3	810486	93604-14012	Pin, dowel (B)	2
4	810398	807-12633-00	Plate	1
5	810399	807-12663-00	Gasket	1
6	810511	98901-05015	Screw, bind	3
7	810395	807-12623-00	Bolt	5
8	810396	807-12624-00	Washer, lock (1)	1
9	810512	807-12625-00	Washer, lock (2)	1
10	810443	92501-06025	Screw, pan head	4
11	810444	92501-06040	Screw, pan head	1
12	810342	806-12631-00	Deflector	1
13	810343	806-12651-00	Air Shroud, cylinder (1)	1
14	810344	806-12652-00	Air Shroud, cylinder (2)	1
15	810440	92501-06012	Screw, pan head	5
16	810439	92501-06010	Screw, pan head	7
17	810454	92901-06100	Washer, spring	12
18	810455	92901-06200	Washer, plain	12
19	810397	807-12632-00	Deflector (2)	1
20	810401	807-12665-00	Collar (2)	2
21	810442	92501-06020	Screw, pan head	2
22	810454	92901-06100	Washer, spring	2
23	810400	807-12664-00	Washer	2

STARTER

802

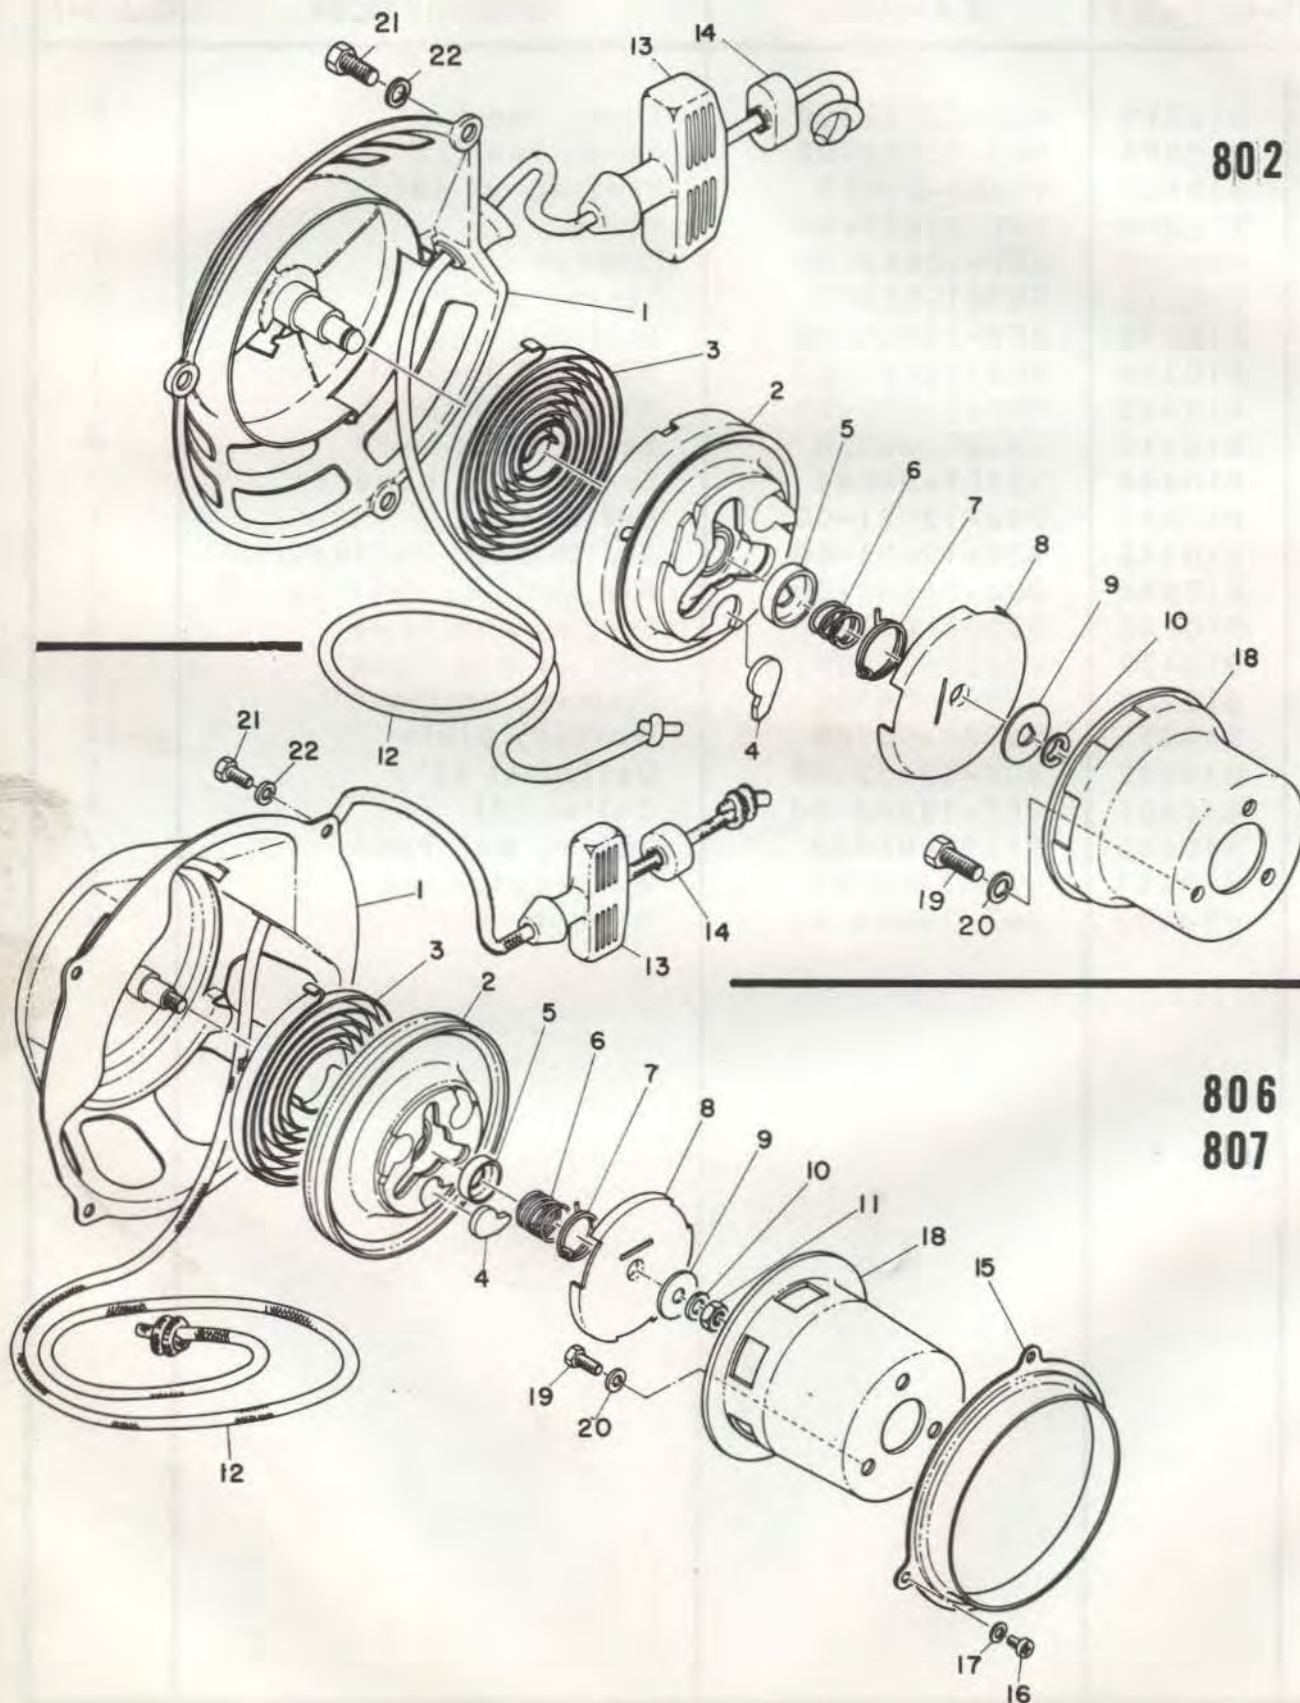

STARTER
(MODEL 802)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810286	802-15710-00	Starter Ass'y	1
1	810287	802-15711-00	. Case, starter	1
2	810289	802-15714-00	. Drum, sheave	1
3	810288	802-15713-00	. Spring, starter	1
4	810295	802-15741-00	. Pawl, drive	3
5	810292	802-15719-00	. Washer, thrust	1
6	810290	802-15715-00	. Spring, drive plate	1
7	810246	619-15734-00	. Spring, return	1
8	810291	802-15716-00	. Plate, drive	1
9	810294	802-15726-00	. Washer, flat	1
10	810296	802-15744-00	. Circlip	1
11	810297	802-15751-00	. Rope	1
12	810247	619-15755-00	. Handle, starter	1
13	810248	619-15756-01	. Connector	1
14	810293	802-15723-00	. Pulley, starter	1
15	810431	91201-06015	Bolt	3
16	810454	92901-06100	Washer, spring	3
17	810431	91201-06015	Bolt	3
18	810454	92901-06100	Washer, spring	3


STARTER
(MODEL 806)

ITEM	SNO ⁺ JET	YAMAHA	DESCRIPTION	QUANT.
0	810411	807-15710-00	Starter Ass'y	1
1	810412	807-15711-00	.Case, starter	1
2	810413	807-15714-00	.Drum, sheave	1
3	810288	802-15713-00	.Spring, starter	1
4	810295	802-15741-00	.Pawl, drive	3
5	810414	807-15719-00	.Washer, thrust	1
6	810290	802-15715-00	.Spring, drive plate	1
7	810246	619-15734-00	.Spring, return	1
8	810291	802-15716-00	.Plate, drive	1
9	810416	807-15726-00	.Washer, flat	1
10	810456	92901-08100	.Washer, spring	1
11	810508	98801-08300	.Nut	1
12	810417	807-15751-00	.Rope	1
13	810418	807-15755-00	.Handle, starter	1
14	810248	619-15756-01	.Connector	1
15	810419	807-15782-00	.Cover, sheave	1
16	810498	98501-05008	.Screw, pan head	3
17	810453	92901-05100	.Washer, spring	3
18	810415	807-15723-00	.Pulley, starter	1
19	810494	97201-08015	Bolt	3
20	810456	92901-08100	Washer, spring	3
21	810431	91201-06015	Bolt	4
22	810454	92901-06100	Washer, spring	4


STARTER
(MODEL 807)

ITEM		YAMAHA	DESCRIPTION	QUANT.
0	810411	807-15710-00	Starter Ass'y	1
1	810412	807-15711-00	. Case, starter	1
2	810413	807-15714-00	. Drum, sheave	1
3	810288	802-15713-00	. Spring, starter	1
4	810295	802-15741-00	. Pawl, drive	3
5	810414	807-15719-00	. Washer, thrust	1
6	810290	802-15715-00	. Spring, drive plate	1
7	810246	619-15734-00	. Spring, return	1
8	810291	802-15716-00	. Plate, drive	1
9	810416	807-15726-00	. Washer, flat	1
10	810456	92901-08100	. Washer, spring	1
11	810508	98801-08300	. Nut	1
12	810417	807-15751-00	. Rope	1
13	810418	807-15755-00	. Handle, starter	1
14	810248	619-15756-01	. Connector	1
15	810419	807-15782-00	. Cover, sheave	1
16	810498	98501-05008	. Screw, pan head	3
17	810453	92901-05100	. Washer, spring	3
18	810415	807-15723-00	. Pulley, starter	1
19	810494	97201-08015	Bolt	3
20	810456	92901-08100	Washer, spring	3
21	810431	91201-06015	Bolt	4
22	810454	92901-06100	Washer, spring	4

ELECTRICAL


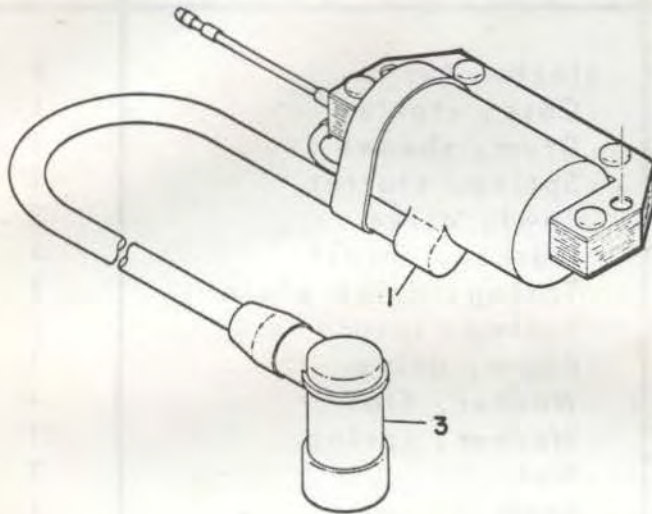


802

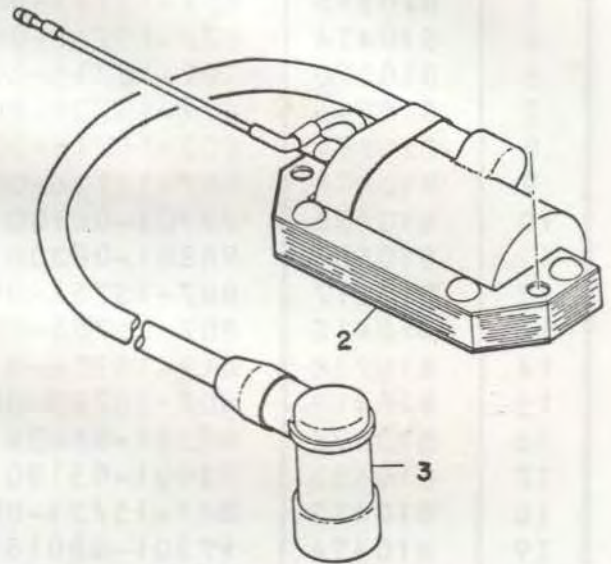

806

807

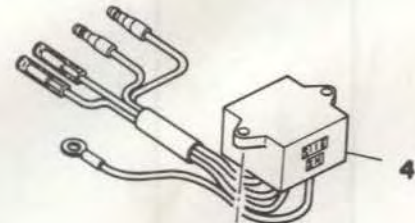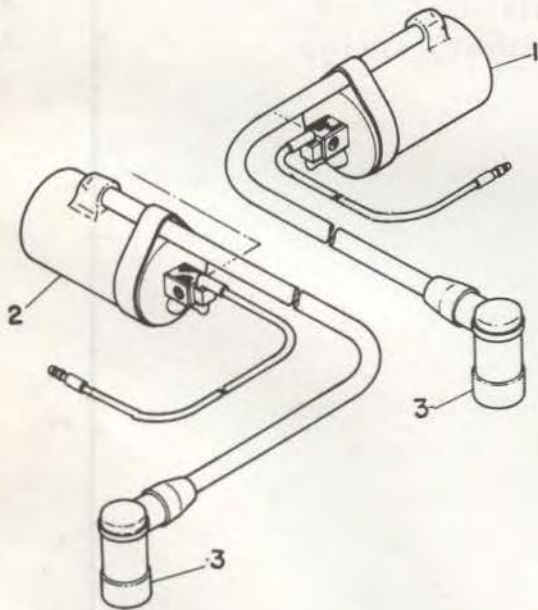

ELECTRICAL
(MODEL 802)

ITEM	 SNO+JET SWISS QUALITY BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
1	810323	802-82310-40	Ignition Coil Ass'y (1)	1
2	810324	802-82320-40	Ignition Coil Ass'y (2)	1
3	810212	117-82370-20	Plug Cap Ass'y	2

ELECTRICAL
(MODEL 806)

ITEM	SNO⁺JET DIVISION GLASTON BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
1	810426	807-82310-40	Ignition Coil Ass'y (1)	1
2	810369	806-82320-40	Ignition Coil Ass'y (2)	1
3	810212	117-82370-20	Plug Cap Ass'y	2
4	810370	806-82390-20	Silicon Stack Ass'y	1

ELECTRICAL
(MODEL 807)

ITEM	SNO ⁺ JET DIVISION GLASTON BOAT COMPANY	YAMAHA	DESCRIPTION	QUANT.
1	810426	807-82310-40	Ignition Coil Ass'y (1)	1
2	810369	806-82320-40	Ignition Coil Ass'y (2)	1
3	810212	117-82370-20	Plug Cap Ass'y	2
4	810370	806-82390-20	Silicon Stack Ass'y	1

SNO-JET USA
P.O. BOX 9968
AUSTIN
TEXAS 78757

SNO-JET, CANADA
P.O. BOX 246,
THETFORD MINES
P. QUEBEC, CANADA